


Dolce Shower Rail With Slim Hand Shower


Nero

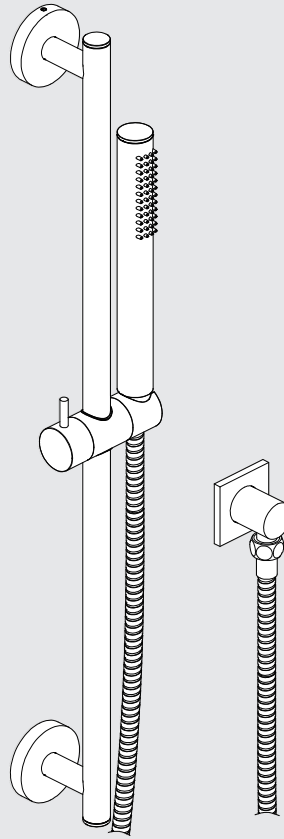

Versions:202506



Drawing

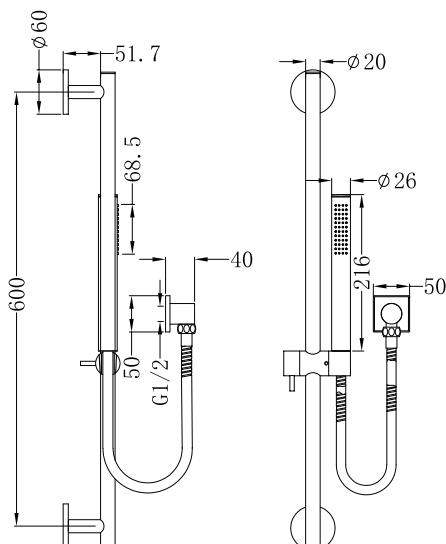

Specifications

Watermark License

WM-060093

Temperature Rating

Min 1°C - Max 75°C

Pressure Rating

Min 150kpa - Max 500kpa


Finish & SKU

Chrome
NR311CH

Packaging Includes




1x Handle Shower (Built- In Check Valve)
1x Shower Hose
1x Elbow
1x Shower Rail

*Dimensions are nominal measurements only.

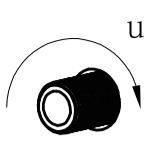

use Teflon tape


1. Put Teflon tape on outlet thread.

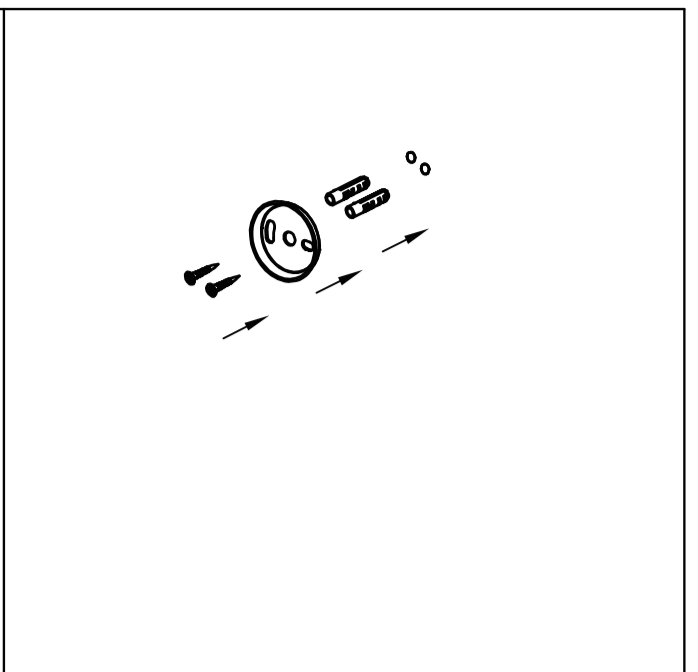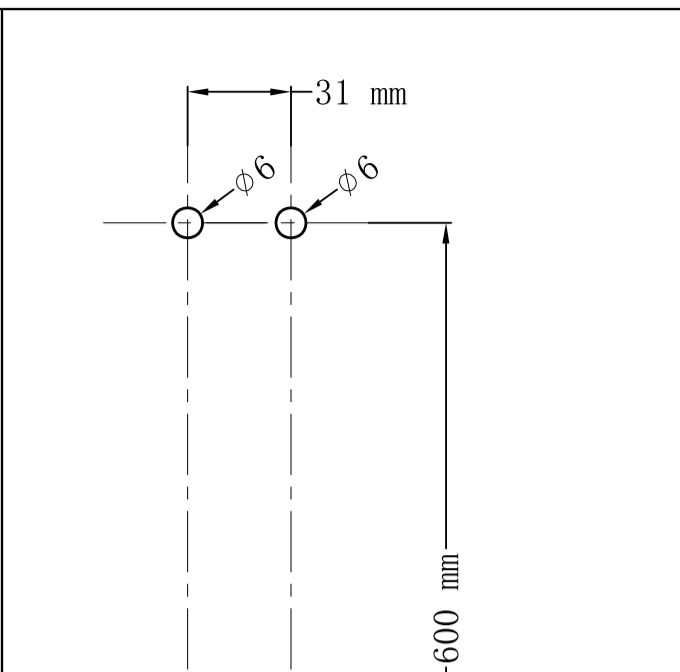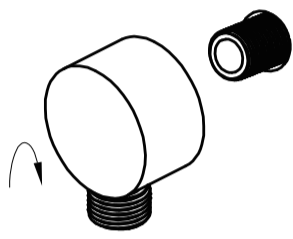
2. Screw elbow body on to outlet.

3. Drill four holes according to above picture.


4. Make expansion plug into four holes and make bracket into holes by tapping screw.

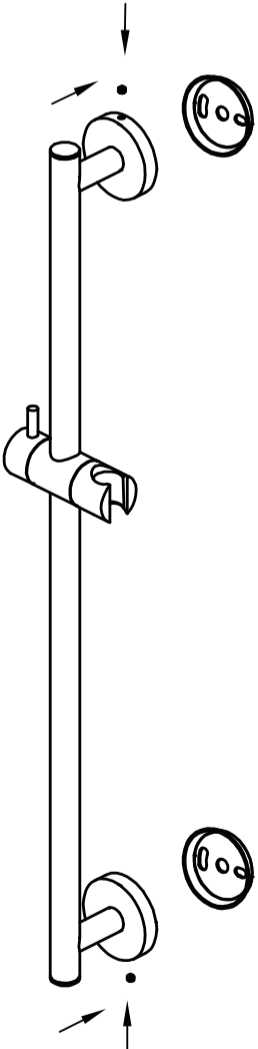

5. Install shower rail onto brackets, tighten two grub screws by hex wrench.

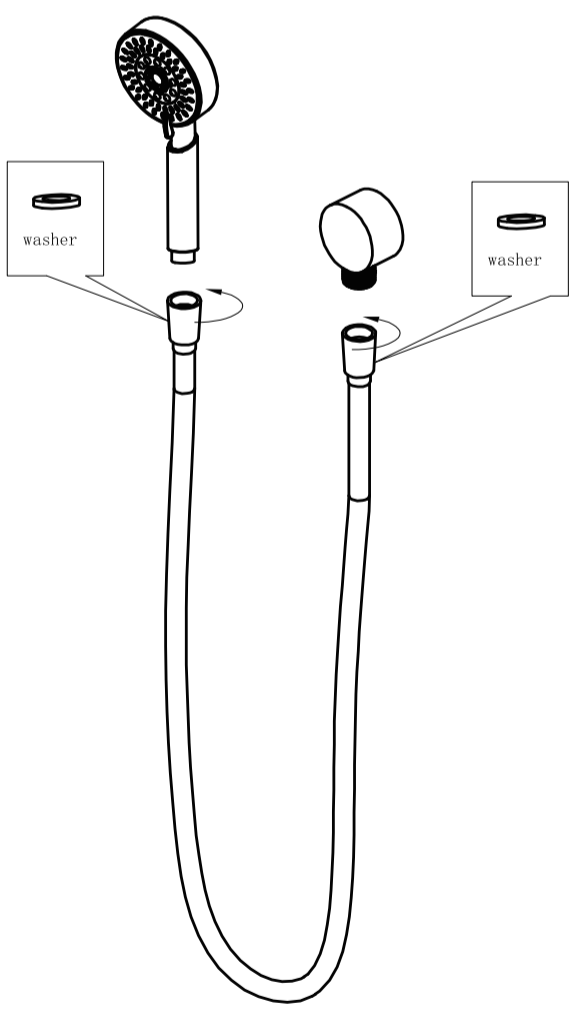

6. Connect hand shower and elbow by shower hose. (Notes: there are two washers in shower hose.)

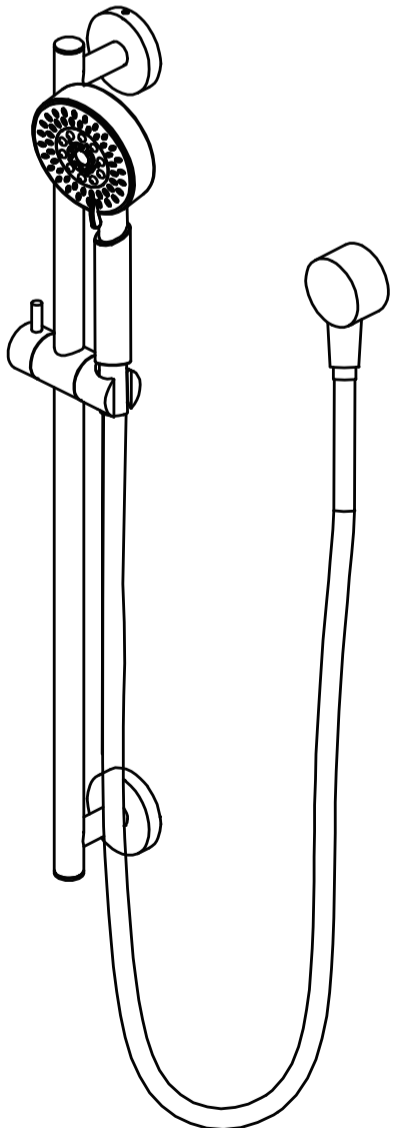

8. Test and check for leaks.

Nero

